

○₁ ○₂ ○₃ <---knobs/buttons

△
◀ F ● S ▶ <--- diamond buttons, foot switch
▽

HOME SCREEN: (i.e., when patch is loaded)

- ₁, ○₂, ○₃ knobs edit parameters of current FX
- ₁ button to access MENU functions (see below)
- ₂ button to access MEMORY functions (see below)
- ₃ button changes parameter pages, hold-press FX THRU

△ / ▽: Change FX for current slot, hold-press for CATEGORIES
CATEGORIES: use Up/Down/L/R to select, FS for ENTER
select EXIT category to CANCEL.

◀ / ▶: Scroll left/right through active slots in FX chain,
hold-press to add an FX to the left or right
of the current slot (uses CATEGORY selection)

F●S: Foot-Switch- in HOME SCREEN, turns individual FX on/off,
hold-press to enter tuner or tap tempo (based on SETTINGS)

SETTINGS: ○₁ button enters SETTINGS mode

DELETE EFFECT UNIT- removes FX & slot from patch/chain

EFFECT CHAIN- re-arrange FX order in chain

“lift-up” and “lift-down” [sic]

Bluetooth- [OFF, ON, PAIRING]

NOTE: Pairing only need for first time.

Turn off BT when not in use.

SETTINGS: HOLD FOR TUNER/TAP – [TUNER, TAP TEMPO] ..for F●S

BYPASS/MUTE TUNER – [BYPASS, MUTE]

POWER MANAGEMENT – [OFF, ON] (off in 10 hrs)

AUTO SAVE – [OFF, ON] - saves all edits

BATTERY TYPE – [ALKALINE, NiMH]

LCD BACKLIGHT – [OFF, ON, 15 sec, 30 sec]

LCD CONTRAST – [1-10]

-
- MEMORY: ○2 button enters MEMORY mode
- 2 knob selects patches,
 - 2 button to exit memory return to home/edit
 - 3 button assigns patches to FS list (A, B .. up to Z)
 - 3 button hold-press clears FS list
- F●S on the MEMORY page, cycles through FS LIST
- 1 "STORE" brings up NAME/SAVE screen with the following controls:
 - 1 knob- < > moves text cursor
 - 2 knob- DEST chooses destination patch number
 - 3 knob- CHAR chooses characters
 - 3 button: SKIP jumps through character types
 - 1 button: ENTER stores patch
 - 2 button: EXIT without saving
-

NOTES:

- * POWER ON by plugging cord into input, (no audio pop)
- * Signal flows from RIGHT-TO-LEFT through the chain (following the jack sides).
- * if the F●S hold-press is set to activate TAP TEMPO, then the tuner is not available. Tap tempo is always available with ○1 button.
- * Some combinations of complex FX can exceed the available DSP. "DSP FULL" is displayed and the FX will be put in a THRU MODE (over the effect). This will allow you to remove or replace other FX in the chain without having to reload this choice.
- * LineSel FX allows you to set levels for line out and FX out, and the F●S toggles between direct to output, or to FX. Effectively, ON/BYPASS for everything after LineSel.
- * Input is rated at -20dBm, 1M-Ohm.
- * Output level: Line +5dBm
- * Output load impedance of 10 kΩ or more
- * POWER DC 9V (ctr neg), 500mA (zoom AD-16), there is also a battery setting for Alkaline & NiMH in settings.
- * ALL INITIALIZE (does not remove add-ons from Stomp Share) press & hold #1 button while powering on. Confirm.